


# GHS-5000

## Change of Flash Card/Memory - Cover Removal Description



- 1) Shutdown the unit by pressing the switch more than four seconds.
- 2) Disconnect power and all other connections.
- 3) Locate the four screws holding the top cover to remove it (see picture below).  
Use proper sized Phillips type screwdriver.

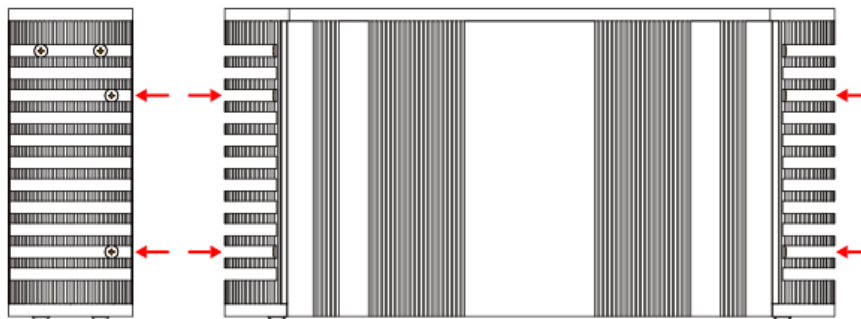

- 4) Ground yourself to the unit with the help of an antistatic wrist strap.
- 5) Replace compact flash card/memory.
- 6) Put the top cover back on and fasten with the four screws.
- 7) Reconnect the unit, power up and wait for the unit to boot up before checking the function.